

Roboguard Remote TX

For use with Roboguard Receivers



All remotes have unique codes in all four of the coloured buttons

To programme the remote into your receiver, follow the instructions in the receiver user manual.

TO CLONE A REMOTE:

Hold down the button on the **slave remote**. Keep holding this button down until programming is completed.

When the light switches off the slave is ready to be taught the code from the master remote.

Position the **master remote** as close to the slave remote as possible. Push the corresponding button on the master remote until the light goes off on the master.

The light will flash continuously on the slave remote once programming is successful.

You can now stop pressing both buttons.

Continue with the next button as above.

The unit is ready to be tested

For maximum transmission hold down the remote button until the LED switches off.

Specifications:

Transmit Frequency:	433.92 MHz
Encryption:	24bit Roboguard protocol
Battery type:	Gp23a 12V
Model Number:	TRX005